




Vinyl Installation Instructions

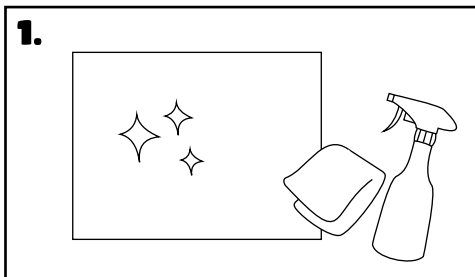


1. Clean surface with isopropyl alcohol and cotton rag (Make sure there is no dust/dirt)

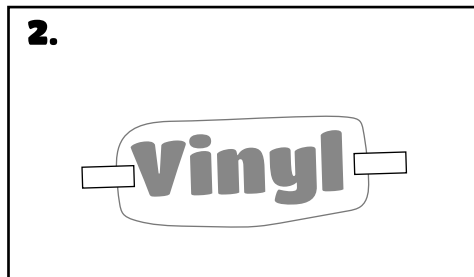


2. Use masking tape to place the vinyl (one piece on the left and right)

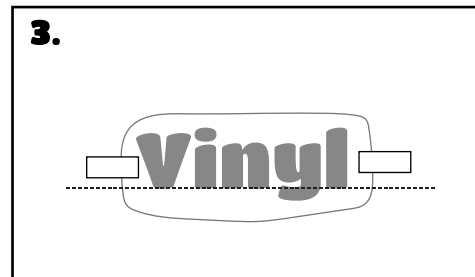


3. Adjust accordingly until it's level/straight.

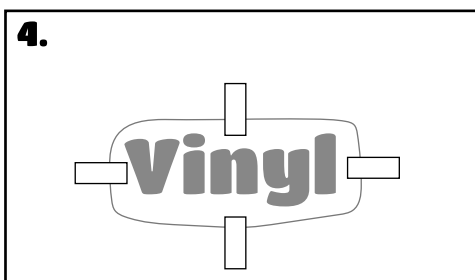


4. Once it's straight, use 2 more pieces of masking tape, place one center/top & one center/bottom.

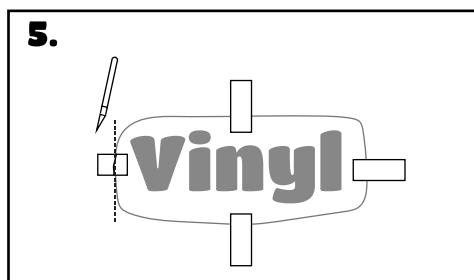


5. Use a knife and *gently* "score" the edge of the masking tape on the Left side.

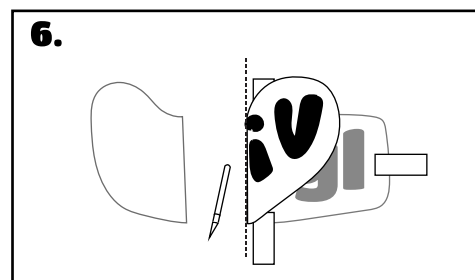


6. Peel back the "backing paper," on the left side, and cut the backing paper off (you want to make a "clean cut")

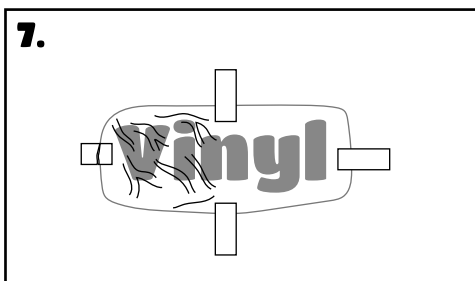


7. Lay down the vinyl, keeping it nice and taut as you gently lay it against the surface, aligning the tape that you "scored" (this helps ensure the vinyl stays straight during installation)

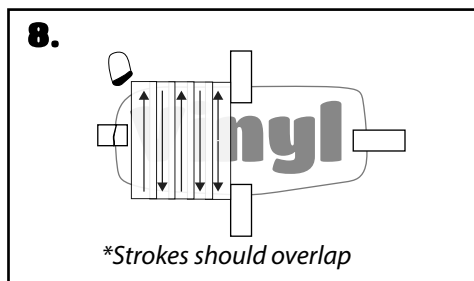


8. Use a squeegee, starting in the center, holding the squeegee at a 45 degree angle. Squeegee down, then up, moving outwards. Moving outwards, slowly, a little stroke at a time. This moves the air out and adheres the vinyl to the surface.

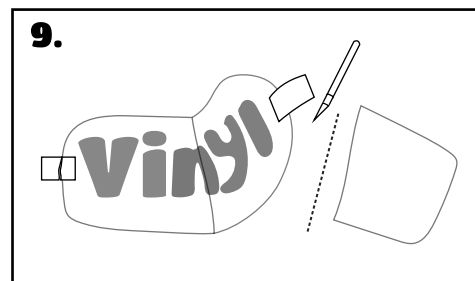

9. Once the first side is squeegeed, release the tape from the top and bottom, and peel off the backing of the paper, exposing the remainder of the vinyl. (Repeat step 7 after backing paper is removed. Make sure to hold the top corner of the vinyl, so that it doesn't "Get away")

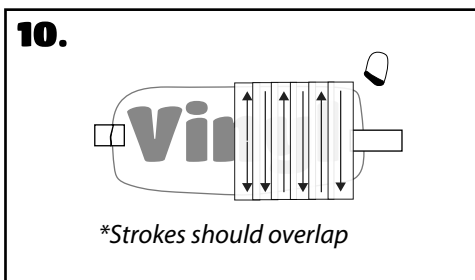

10. Start squeegeeing up and down, from the center, working your way to the outside edge. Moving outwards, slowly, a little stroke at a time. (Make sure all edges are down nice and tight.)

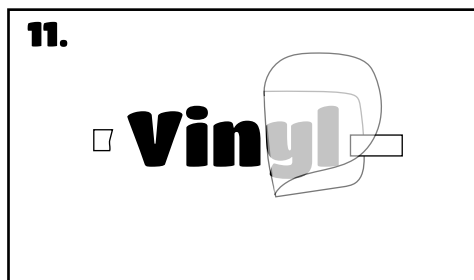

11. Gently peel off the white application tape.



12. If there are any bubbles, take Sharp Exact-o knife and poke small holes towards the base, and press out the trapped air.

**FAST LANE
SIGNS**